

# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



# **RLCO-808-1000G**



## **TECHNICAL DATA**

# **High Power Infrared Laser Diode**

### Features

Lasing Mode Structure: multi mode
Peak Wavelength: typ. 808 nm
Optical Ouput Power: 1 W

Package: 9 mm



### **Electrical Connection**

Pin Configuration					Bottom View	
10	93	n-type			2	
15	750	PIN	Function			
LD /	→ PD	1	LD Cathode		<del>&gt; •   •   · · · · · · · · · · · · · · · ·</del>	
		2	LD Anode, PD Cathode		\ 1 \ 3 /	
		3	PD Anode			
02		-				

# Absolute Maximum Ratings ( $T_C=20$ °C)

Item	Symbol	Value	Unit
CW Output Power	Po	1	W
Operating Case Temperature	T <sub>C</sub>	-10 +50	°C
Storage Temperature	T <sub>stg</sub>	-40 <b>+</b> 85	°C

## Specifications ( $T_C=20$ °C)

Item	Symbol	Min.	Тур.	Max.	Unit				
Optical Specifications									
CW Output Power	Po	-	1	-	W				
Center Wavelength	$\lambda_{C}$	803	808	813	nm				
Spectral Width (FWHM)	Δλ	-	5	-	nm				
Wavelength Temperature Coefficient	∂λ / ∂T	-	0.3	-	nm/°C				
FWHM Beam Divergence	$\Theta_{\parallel}$	-	-	12	deg				
PVVHIVI Bealli Divergence	θΪ	-	-	40	deg				
Emitting Width	W		100		μm				
Polarization			TE						
Electrical Specifications									
Threshold Current	I <sub>th</sub>	-	0.26	-	Α				
Operating Current	l <sub>op</sub>	-	1.3	-	Α				
Slope Efficiency	η	1	-	-	W/A				
Operating Voltage	U <sub>op</sub>	-	1.6	2.2	V				
Series Resistance	$R_d$	-	-	0.5	Ω				

The above specifications are for reference purpose only and subjected to change without prior notice.




# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76

1040 VIENNA AUSTRIA TEL. +43 I 586 52 43 -O, FAX. -44, OFFICE@ROITHNER-LASER.COM



# Package Dimensons

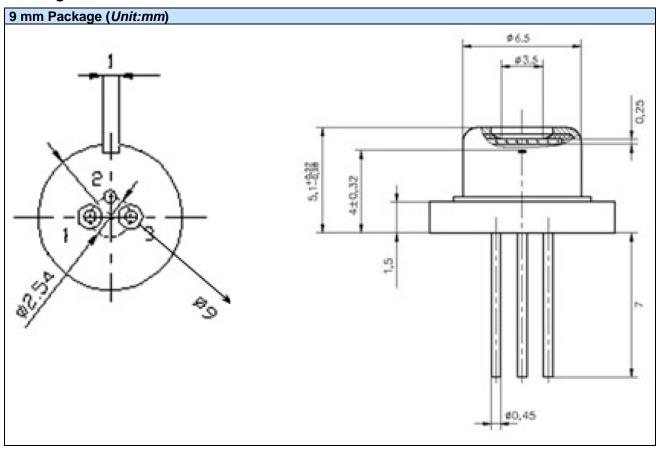



# Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the
eye or skin directly to any laser light and/or through optical lens. When
handling the LDs, wear appropriate safety glasses to prevent laser
light, even any reflections from entering to the eye. Focused laser
beam through optical instruments will increase the chance of eye
hazard.



• This LD is emitting invisible light.

#### **Cautions**

### 1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by switching on and off does not exceed the
  maximum operating current level specified herein above as absolute maximum rating. Also,
  employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

## 2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

#### 3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

